




PERSONAL CARE

Classic Smart Comfort massage chair

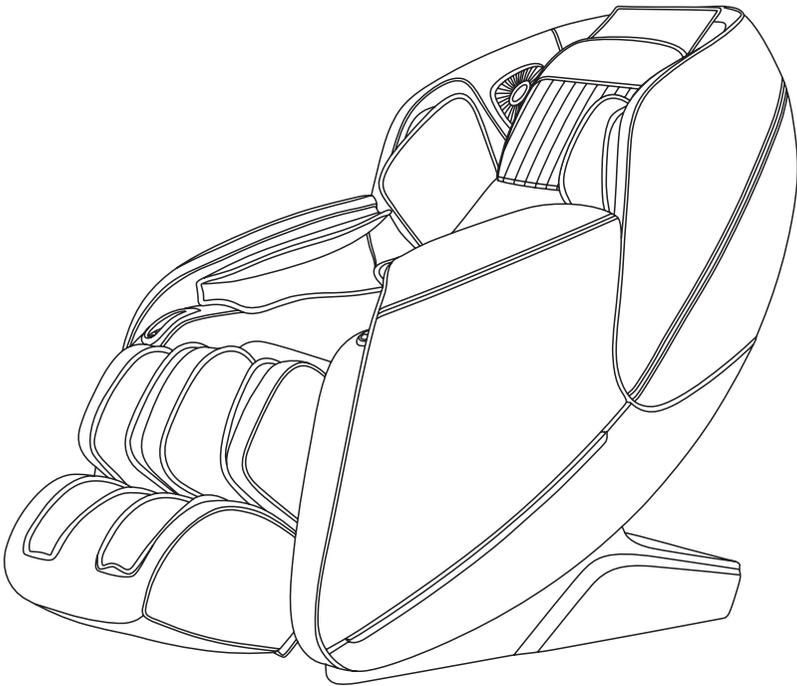

Instructions EN: 2-24

SAVE THESE INSTRUCTIONS

Thank you for purchasing this Witt Personal Care product.

Before using it, please read these instructions carefully and pay particular attention to the safety instructions in order to ensure a correct functionality and use of the chair.

Please note: We reserve the right to make ongoing changes/updates to the product without prior notice.

SAFETY INSTRUCTIONS	4
OVERVIEW OF THE MASSAGE CHAIR	8
FUNCTIONS AND CHARACTERISTICS.....	9
HOW TO OPERATE	7
1. Turn on the massage chair	12
2. Begin the massage.....	12
3. Overview of shortcut keys on the armrest of the massage chair.....	16
4. Voice control.....	18
5. Bluetooth.....	19
6. Turn off the power and stop the massage.....	19
7. Installation of leg support.....	19
8. Floor protection.....	21
9. Move the chair.....	21
SPECIFICATIONS	22
WARRANTY AND SERVICE	23

SAFETY INSTRUCTIONS



1. Important safety instructions

- Children are not permitted to use the massage chair.
- The massage chair must be properly grounded. The plug must always be inserted into a suitable socket that is correctly installed in accordance with all local regulations.
- Remove the plug after you have used the chair and before cleaning to avoid damage to the product or injuries to people.
- Follow the recommendations in these instructions.
- Do not use accessories that are not designed to be used with the massage chair.
- The massage chair is exclusively designed for indoors use.
- Read these instructions carefully before operating the massage chair.
- It is forbidden to use the massage chair for anything other than its intended purposes.
- Do not use the massage chair for more than 20 minutes at a time.
- Do not use the massage chair if the fabric is damaged or destroyed.
- Do not use the massage chair if the ventilation holes are covered or blocked.
- Do not drop items into the massage chair.
- Do not fall asleep while using the massage chair and it is powered up.
- Do not use the massage chair when intoxicated or if you are feeling unwell.
- To avoid discomfort, the massage chair should only be used an hour after you have eaten a meal.
- Do not use excessive power settings on the massage function to avoid injury.

2. The surrounding environment

- Do not use the massage chair in high temperatures or in moist environments such as bathrooms.
- Do not use the massage chair if the temperature is excessively hot or cold.
- Do not use the massage chair in very dusty or flammable environments.
- Make sure that you have plenty of space around the massage chair and that the room is properly ventilated.

3. The following people are advised against using the massage chair

- People with osteoporosis.
- People with heart disease or people who use electronic medical devices operated into the body such as pacemakers, etc.
- People with a fever.
- Pregnant or menstruating women.
- People with a skin disease or damaged skin.
- Children under the age of 14 or people with physical, sensory or mental impairment who are not sufficiently experienced or lack the relevant skills. Exceptions are permitted if such people are being supervised.
- People who are getting medical treatment by a doctor or people who feel unwell.
- It is not permitted to use the massage chair when wet.
- The massage chair has a heat functionality, so people who are sensitive to heat should be particularly careful when using it.

4. Safety instructions

- Ensure that the power supply is suitable for this specific product. Please do not use a power supply that exceeds the recommended voltage, as this may cause fires or damage the product.
- To avoid electric shocks, do not handle the plug if you have moist hands.
- Do not let water seep into the massage chair, as this can cause electric shocks or damage the product.
- The cord must not be damaged or bent excessively. Do not make alterations to the electric circuits.
- Do not use a wet rag to clean the massage chair's electric components such as the plug and socket.
- Keep a distance from the massage chair during power cuts to avoid damage if the power suddenly comes back on.

SAFETY INSTRUCTIONS

- Do not use the massage chair if it is not working correctly. Please contact your local retailer immediately in such cases.
- Do not use the massage chair if you are feeling unwell. Contact a doctor if that is the case.
- The massage chair is not intended to be used by children or people with physical, sensory or mental impairment or people who are not sufficiently experienced or lack the relevant skills. Exceptions are allowed for cases where such people are instructed in how to use the product and where they are initially supervised by a person who is responsible for their safety.
- Keep an eye on children to ensure that they do not play with the massage chair.
- If the cord or plug are damaged in any way, disconnect them from the power supply immediately and consult an authorised electrician for repairs or replacements.

5. Maintenance

- No one except from authorised personnel selected by our company should disassemble, maintain or reconstruct this massage chair. If there are problems, please contact your local retailer immediately.
- Do not forget to disconnect the power after using the massage chair.
- If the cord or plug are damaged in any way, disconnect them from the power supply immediately and consult an authorised electrician for repairs or replacements.
- Roll the cord up and store the massage chair in an environment that is dry and free of dust if the massage chair is not to be used for an extended period.
- Do not store the massage chair in an area with high temperatures or near sources of fire and do not expose it to direct sunlight for long periods of time.
- Do not use the massage chair if the socket is loose.
- Wipe the massage chair with a dry rag when cleaning it. - Do not use thinning agents or alcohol-based solvents.
- The mechanical components on the massage chair are custom made. They do not require any special kind of maintenance.
- Do not use strong detergents on this product.
- Do not roll or pull the massage chair across uneven surfaces. The massage chair must be lifted if you need to move it.
- Do not use the massage chair continuously - do not let it run non-stop.

6. Functional errors may be due to:

If the engine is humming when it is in use, these are natural sounds from the moving parts.

- If the remote does not work, see if the plug and cord are attached correctly and make sure the switch on the socket is turned on.
- If the specified running time has passed, the massage chair will automatically turn off. If the massage chair is used continually, the temperature safeguard will ensure that the massage chair turns off automatically. The massage chair can then be used again after half an hour.


7. Storage

- Storage temperature: -5°C - 35°C
- Humidity: 20 % to 80 %.
- Do not store the massage chair near flammable or corrosive gases such as gasoline vapours.

SAFETY INSTRUCTIONS


Warning:

Do not press down on the leg support when lifting it to avoid the massage chair from tipping forward and to prevent injuries to people or damage to the product.

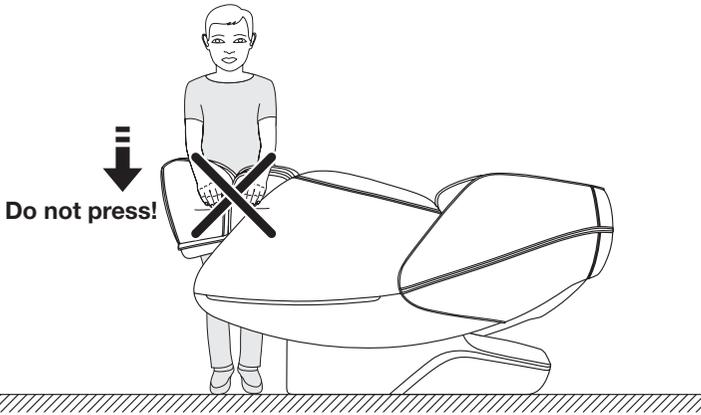


Warning:

Please ensure that the massage arm is not placed in the seat before you sit on it, as this may cause injuries or damage to the product.

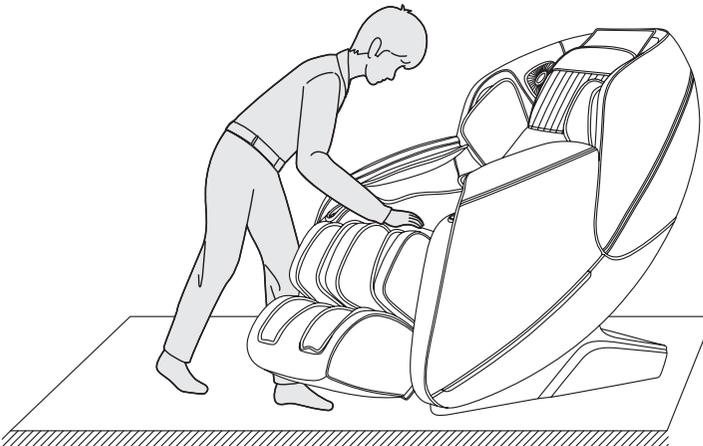


Warning:

Ensure that the cord and plug are not pulled out when the massage chair is in standby mode or turned in as this may cause electric shocks or damage to the product. It is recommended to pull out the cord and put it away after using the massage chair.



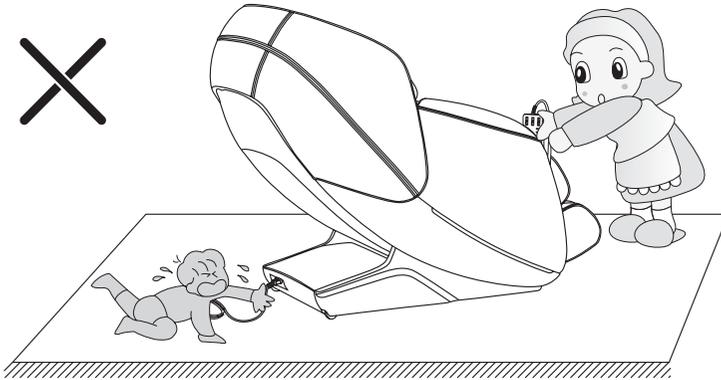


Warning:

Ensure that children and pets are never playing under or nearby the massage chair, leg support and back cover before activating the zero gravity function to avoid injuries and damage to the product. It is not permitted for children and pets to play on the massage chair, particularly not when it is in use. It is also not permitted to stand or sit on the backrest or armrest.

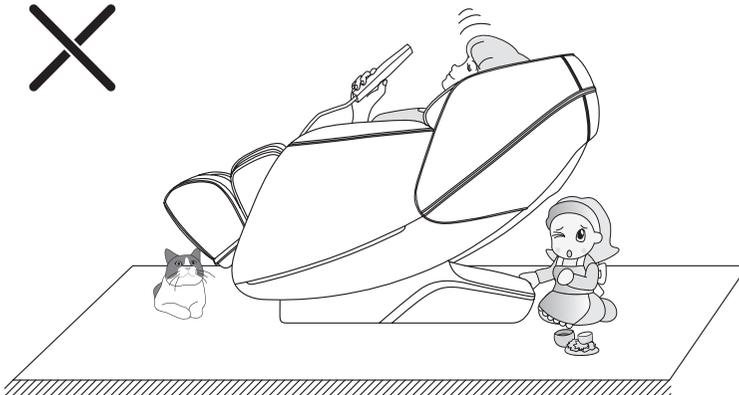

OVERVIEW OF THE MASSAGE CHAIR

 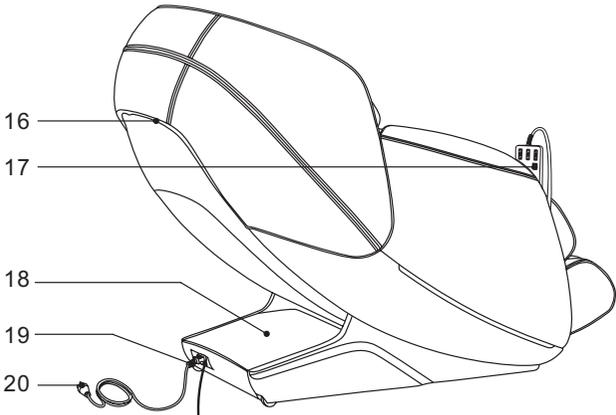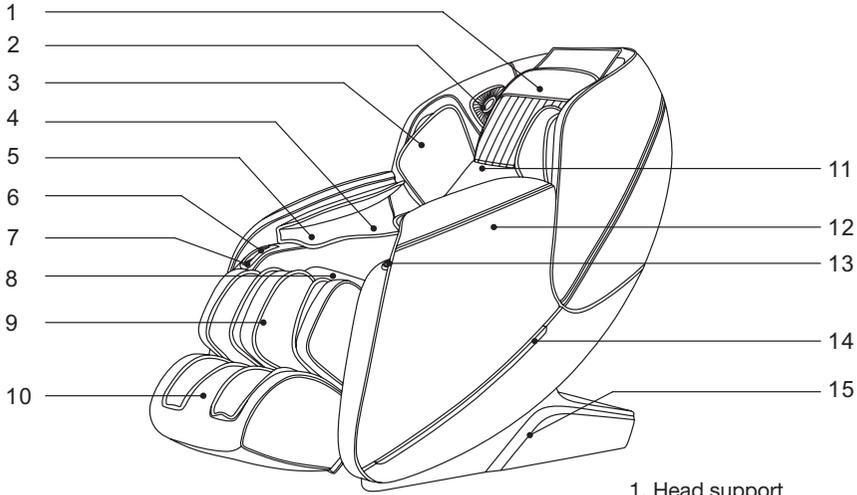

1. Head support
2. 3D digital loudspeakers with voice control (microphone on the left side)
3. Upper arm: air pressure pillow for massaging the upper arm
4. Arm: air pillows for massaging the arm
5. Massage w. magnetic therapy
6. Remote control or mobile phone holder
7. USB charging port
8. Seat cushion
9. Leg support
10. Foot support
11. Back support
12. Armrest
13. Shortcut key
14. LED light
15. Side cover
16. Back cover
17. Remote control
18. PCB cover
19. Wheel
20. Cord and plug
21. Safety box
22. On/off button
23. Power plug


21 22 23

- The massage chair is designed with a number of massage functions and can move up and down, push forward and backward and it does not emit a lot of noise.
- There are 5 massage techniques: shiatsu, kneading, tapping (light tapping), simultaneous tapping and kneading and knocking.
- Automatic registration of shoulder position.
- There are 12 automatic massage functions: comfortable, relaxing, traction, shoulder and neck, back and waist, whole body, protection of vertebral, fatigue recovery, stretching muscles and activating collaterals, beautiful buttock shaping, soothing sleep and full air pressure.
- Includes manual massage functions for the upper body (whole body massage, fixed massage and 3 points for massage and the speed of each setting can be adjusted via 5 different levels. When selecting a local massage area or when using a fixed massage, the massage arm can be adjusted up and down. When using the tapping, shiatsu and knocking settings, there are 3 settings to choose from to adjust the width of the massage ball.
- Air pressure massage: air pressure massage on the upper arm (with 4 air pillows), air pressure massage on the arm (with 8 air pillows), air pressure massage on the legs (with 16 air pillows). There are three different air pressure intervals to select from.
- Extending the foot support: push your feet forward to extent and push them back to shorten.
- The foot support can be raised independently from the back support, zero gravity adjusts the foot support and back support simultaneously.
- Heat function for the back: uses coal fibre as an infrared heat sourced.
- The massage chair is designed with the Zero Wall function and the chair will only move within its own axis when the back support is leaned back on.
- The SL shape of the back support: The L-shaped incline provides you with the most relaxing massage setting and massages you from your neck to your thighs. The ergonomic design ensures that the spine is kept in the correct S position.
- Music system: designed with 3D digital loudspeakers on the left and right sides.
- You can play music wirelessly using a Bluetooth device on a smartphone, tablet, etc.
- Foot roller massage function: under your feet there are two pairs of rotating rollers that massage toes, arches and heels.
- The right armrest is equipped with a remote control or mobile phone holder and a USB charger.
- Massage with magnetic therapy for the left and right palms.
- There are 5 different shortcuts you can use on the massage chair's left armrest: on/off, lower/raise the leg height, adjust the position of the chair, automatic functions button and voice control.
- The left and right armrests are equipped with LED lights.
- LCD colour display
- When turning off the chair, it will automatically revert to its starting position (sitting) and the massage arm will also return to its starting position.

HOW TO OPERATE

REMOTE CONTROL:


LCD display: shows all massage functions

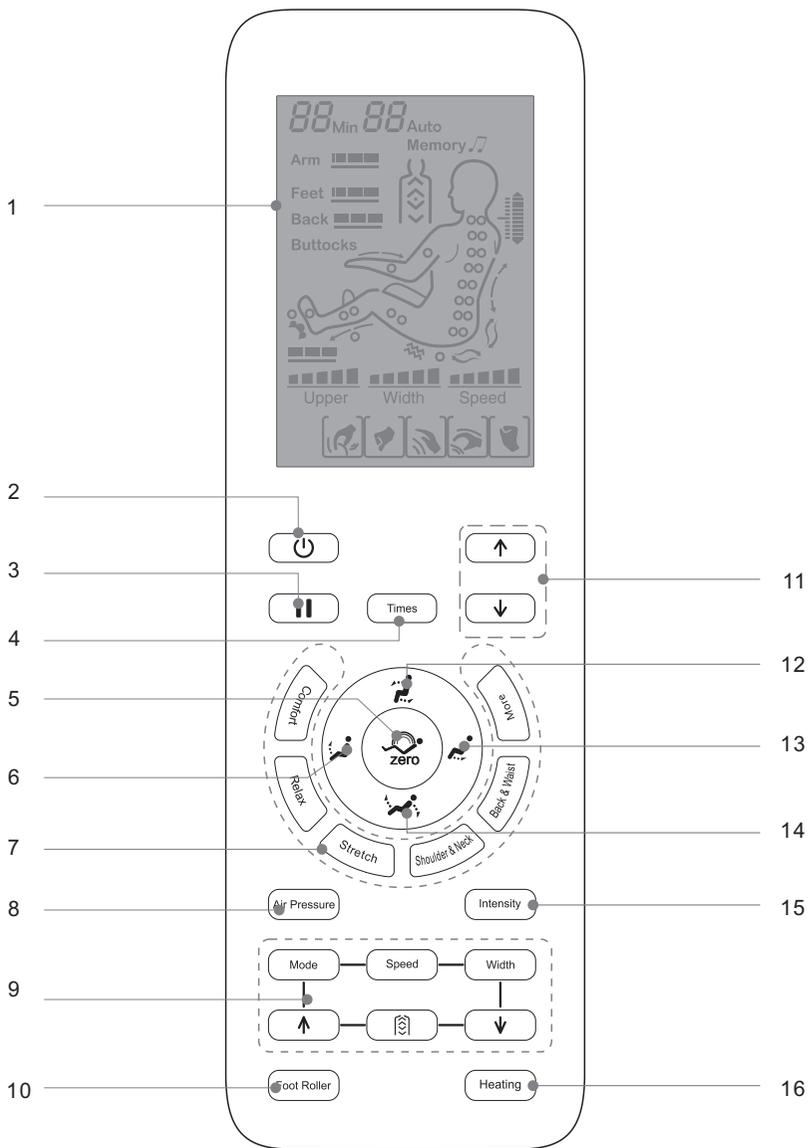

1. LCD: shows all massage functions
2. On/off: turns all massage functions on and off
3. Pause/Start: pauses all massage functions and starts them up again
4. Timer: sets the timer for how long you want the massage to last
5. Automatic raise/lower function: 3 different settings to suit your individual requirements
6. Foot support UP: raises the position
7. Automatic massage button
8. Air pressure massage: turns air pillow massage on and off
9. Manual massage
10. Foot roller massage
11. Adjustment of shoulder position: manual adjustment of shoulder position and position for finger pressure massage
12. Adjustment: the back support is raised and the leg support is lowered
13. Foot support DOWN: lowers the foot support
14. Adjustment: back support is lowered and leg support raised
15. Air pressure intensity: adjustment of the intensity of the air pressure massage
16. Heat function: turn heat on/off

HOW TO OPERATE

1. Turn on the massage chair

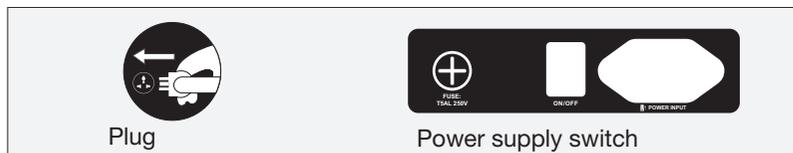


2. Begin the massage

1. Press the on/off switch to begin a massage. The preset setting for massage is the comfort setting.
2. The massage chair will be automatically lowered to a half lying down position.
3. Automatic registration of the shoulder position. Make sure you are sitting properly in the chair.
4. If the registered shoulder position deviates from the actual user's shoulder position, you can adjust it up/down via the navigation button to get the position right. There are 10 different levels to choose from. You have 10 seconds to make your selection and then the massage will begin automatically.

Please note: You can skip the registration of the shoulder position and instead select an automatic massage programme immediately.

Button	Description	Display
	Move the massage balls up until they are in appropriate positions.	
	Move the massage balls down until they are in appropriate positions.	

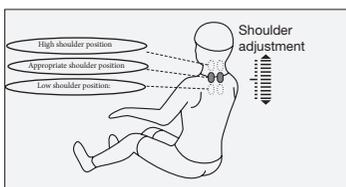

Select between 12 automatic massage functions: comfortable, relaxing, traction, shoulder and neck, back and waist, whole body, protection of vertebral, fatigue recovery, stretching muscles and activating collaterals, beautiful buttock shaping, soothing sleep and full air pressure.

(Step 4 can be skipped).

Function	Button	Description	Display	
Auto- matic massage		Offers the most pleasant massage experience	F1 Auto	
		Soft and pleasant deep massage that relaxes the body and reduces fatigue	F2 Auto	
		The leg support is lifted and the back support is adjusted: an air pressure massage and leg massage has a stimulating effect and restores vitality.	F3 Auto	
		Shoulders and neck: massage focuses on the shoulders and neck.	F4 Auto	
		Back and lower back: massage focuses on the back and lower back.	F5 Auto	
			Whole body massage: deep massage that rejuvenates the body.	A1 Auto
			Gentle massage for the vertebrae: Relaxation for the body and mind.	A2 Auto
			New energy: strengthens the whole body and eases fatigue and pains in the back and limbs, has a relaxing effect and improves micro circulation and invigorates the body.	A3 Auto
			Meridian massage (ancient Chinese form of treatment): dredge meridians, quick improves the body's micro circulation.	A4 Auto
			Buttocks massage: effective massage for the buttocks and thighs, firms the body.	A5 Auto
			Soothing sleep (calming): helps the body to get back into balance, improves sleep quality.	A6 Auto
		Full air pressure massage: focus on the entire body. Air pressure massage that gives a deep form of body relaxation. Eases fatigue and pain the body.	A7 Auto	

HOW TO OPERATE

• Upper body massage

Function	Button	Adjustment of massage ball	Display
Technique	Mode	Shiatsu: speed and width	
		Kneading: speed	
		Tapping; speed and width	
		Kneading and tapping: speed	
		Knocking: speed and width	
Speed	Speed	5 adjustable settings	 Speed
Width	Width	Select between 3 levels	 Width
Back stretch	Back stretch	Fixed massage	
		Small area; point massage	
		Massage for the entire back	
	Up arrow	Adjustment of massage area (with fixed massage and local massage, the area/ position can be adjusted).	Up arrow
Down arrow		Down arrow	

• Air pressure massage

Function	Button	Description	Display
Settings for air pressure massage	Air Pressure	Full air pressure massage on arms, legs and feet	Arm  Feet 
		Arm: air pressure massage focusing on the arms	Arm 
		Leg: air pressure massage focusing on the legs	Feet 
Intensity	Intensity	3 different adjustment options	Arm  Feet 

• Foot roller massage

Function	Button	Description	Display
Foot roller	Foot Roller	Press the button multiple times to select the level of intensity (low/medium/fast) or to turn off the function.	

• Heat

Function		Description	Display
Heat		Press the button to activate or deactivate infrared hyperthermia. After 3 minutes, the heat function will be activated.	

• Pause/Start

Function		Description	Display
Pause/start		You can always pause an in progress massage programme by pressing this button. Press the button again to continue the massage.	

• Adjust incline

Function		Description
Back support UP/ leg support DOWN		Press the button and hold it down, the back support will be raised and the leg support will be lowered. Release the button when you find the desired position.
Back support DOWN/ leg support UP		Press and hold the button down, then the back support will be gradually lowered and the leg support will be raised. Release the button when you find the desired position.
Leg support UP		Press and hold down the button and the leg support will slowly be raised. Release the button when you find the desired position.
Leg support DOWN		Press and hold down the button and the leg support will slowly be lowered. Release the button when you find the desired position.
Zero gravity		Press the button to automatically lower the chair to a lying position. Zero gravity has 3 different settings.


• Other manual functions

Function		Description	Display
Timer		Set timer. Each push of the button extends the massage time by 5 minutes. The timer maximum is for 30 minutes.	20 minutes


HOW TO OPERATE

3. Overview of shortcut keys on the armrest of the massage chair

Left arm

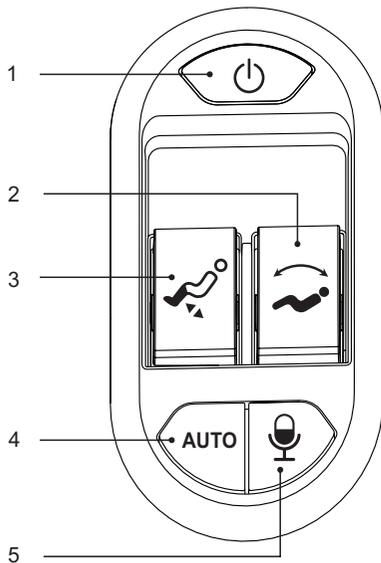

Right arm

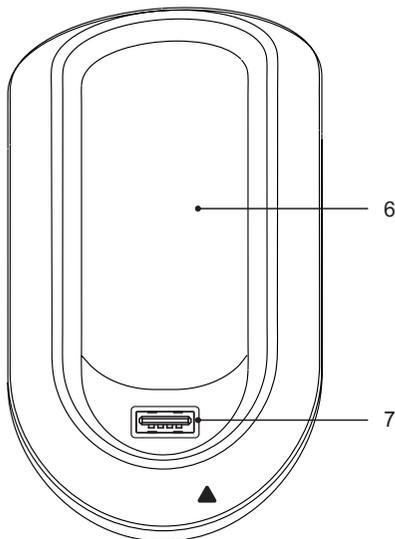

Shortcut key for the left armrest:

1. On/off: Turn the massage chair on/off
2. Adjustment of the chair's position: Adjust the back support up and down
3. Navigation button, leg support: Adjust the leg support up or down
4. Auto button: Activates automatic massage function
5. Voice control

Shortcut key for left armrest:

6. Holder: Place the remote control or your mobile phone in the holder
7. USB charging port

Function	Description
	<p>On/off: Press the button to activate or deactivate that massage function</p>
	<p>Raise the foot support: Press the button to raise the foot support. Release the button when you find the desired position.</p>
	<p>Lower foot support: Press the button to lower the foot support. Release the button when you find the desired position.</p>
	<p>Adjustment: The back support is raised and the foot support is lowered. Release the button to stop the adjustment.</p>
	<p>Adjustment: The back support is lowered and the leg support is raised. Release the button to stop the adjustment.</p>
<p>AUTO</p>	<p>Auto: Press the button and change the auto settings for massages</p>
	<p>Microphone: Turn voice control on/off</p>
	<p>USB port: Charger for mobile phones or other smart devices</p>

HOW TO OPERATE

4. Voice control

- When the massage chair is turn on or in standby mode, say “Hi Alice” to activate voice control.
- When the voice control is activated, the massage chair will say: “I am here.” Now you have 6 seconds to give the massage chair a voice command stating the massage programme that you want to activate. If you do not give the correct voice command within 6 seconds, the voice control will automatically be switched off and you will need to activate it again.

Voice control		
Activate voice control by saying: “Hi Alice.” The response will be: “I am here.”		
NO.	Command	Response:
1	Massage on (turn on the massage)	Response: OK, massage on
2	Massage close (end the massage)	Response: Ok, massage close
3	Comfort massage	Response: OK, comfort massage
4	Relax massage	Response: OK, relax massage
5	Full body massage	Response: OK, full body massage
6	Neck and shoulder massage	Response: OK, neck and shoulder massage
7	Back and waist massage	Response: OK, back and waist massage
8	Stretch massage	Response: OK, stretch massage
9	Fixed massage	Response: OK, fixed massage
10	Change the other mode	Response: OK, change the other mode
11	Go little down	Response: OK, go little down
12	Go little up	Response: OK, go little up
13	Open the air pressure	Response: OK, open the air pressure
14	Close the air pressure	Response: OK, close the air pressure
15	Up the seat position	Response: OK, up the seat position
16	Down the seat position	Response: OK, down the seat position
17	Stop adjustment	Response: OK, stop adjustment


5. Bluetooth

1. Go to the functions for Bluetooth on your smart device and search for new Bluetooth devices.
2. Find the following user name: IMCM-XXXX and then connect your device to the massage chair.
3. Find a playlist on your smart device and turn on the music.

6. Turn power off and stop the massage.


-During a massage, you can press the on/off button to immediately stop the massage. The back support and foot support are reset, the massage is done and all massage functions are turned off immediately. The chair will return to its start position once you stop the massage.

-Turn off the power to the whole massage chair, see the illustration below.

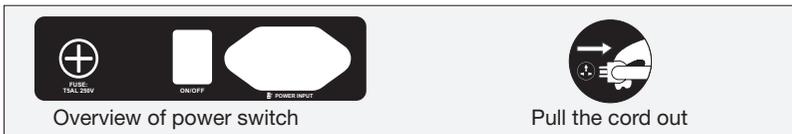


7. Installation of leg support

1. After connecting the air hose and the plug cord from the leg support to the massage, the fixed band and cord will be released and the plug is inserted into the chair frame. (Figure 1)
2. Attach the two installation covers to each side of the round tube on the leg support. (Figure 2)

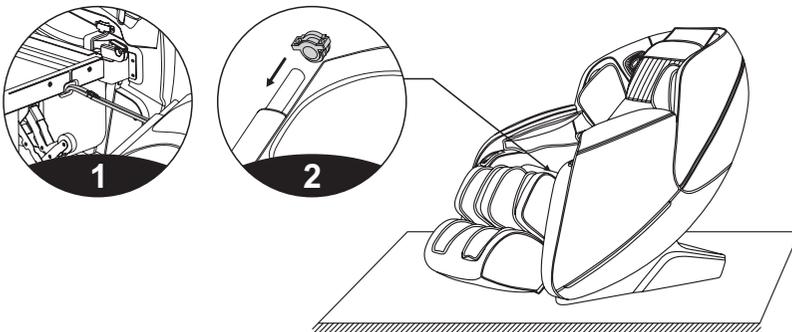


HOW TO OPERATE

3. Attach the fastening cover from the leg support to the hook of the massage chair (Figure 3).
4. Use 4 pieces (2 for each side) M4 screws to fasten the leg support to the massage chair. See if there is anything that looks out of order and verify that the air hose is curved and then complete the installation (Figure 4).

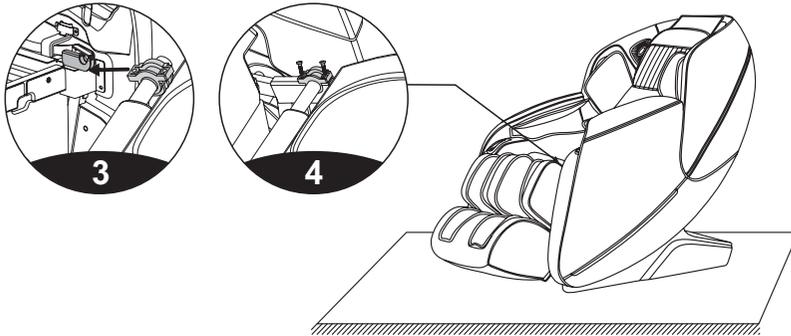

9. Floor protection

-If you place the massage chair on a wooden floor, it is recommended that you first put a carpet over that spot as the chair is heavy and may damage wooden floors.

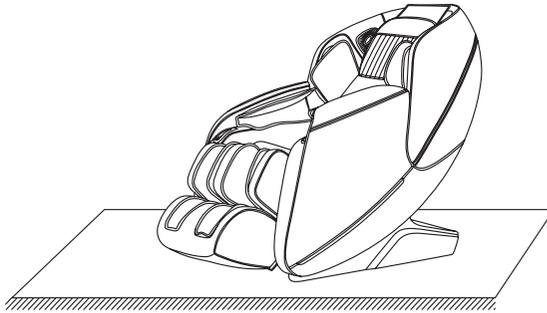


Be careful: Even though the massage chair has wheels, you should not move it around in compact areas. Let two people lift the chair. Hold on to the base and back support instead of the armrests when moving the chair.

10. Move the chair

Make sure that all cords are collected and not just lying on the floor before moving the massage chair. Tip the chair backwards (the centre of gravity must be on the wheels) and then push the chair forwards or backwards to the desired position and then slowly tip it back into place.

(Please note: Before moving the massage chair, you must disconnect it from the power source and the cord should be pulled out)

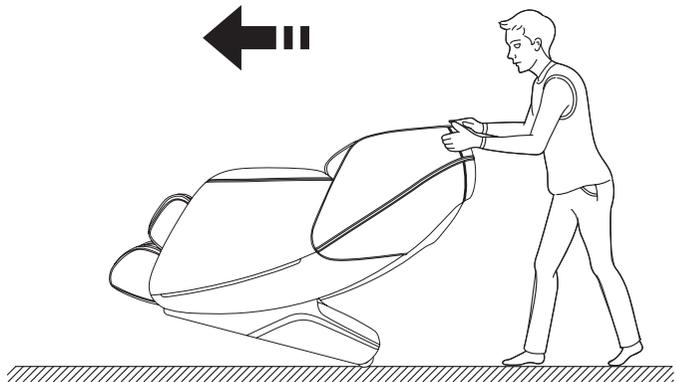

Warning: The wheels on the massage chair are only designed to be used over short distances. Use other methods if you need to move the massage chair further away.

SPECIFICATIONS

Configuration: 8

Product name: Witt Classic Smart Comfort massage chair

Voltage: 110-120V - 60 Hz

220-240V - 50Hz/60Hz

Power consumption: 120W

Time: 20 minutes

Safety design: Class 1

Materials: PVC, PA, steel parts and electrical and electronic components.

IMPORTANT:

Warranty covers materials and labour and lasts for 2 years. When contacting the service department, you must state the product's name and serial number and fill out the service form at: <https://service.witt.dk/service/da/Other/Service.aspx>. You can find this information on the type plate. You can write down the information on the type plate here in these instructions so that you have them at hand. This makes it easier for the service technician to find the correct spare parts.

THE WARRANTY DOES NOT COVER:

1. Faults and damage that are not due to manufacturing or material issues
2. Regular wear and tear.
3. Damage caused by the use of unoriginal spare parts
4. Damage resulting from failing to follow the instructions on how to use the device
5. If the device has not been set up/assembled as specified in the instructions
6. If non-professionals have installed or repaired the product.

TRANSPORT DAMAGE

If the product is damaged during transport and this is only discovered when the retailer delivers the product to the customer, this is exclusively a matter between the customer and the retailer. In cases where customers have transported the product themselves, the supplier shall not be liable for any potential damage during transport. Any damage caused during transport must be reported immediately and no later than 24 hours after the product has been delivered. If not, the customer's claim will be rejected.

UNWARRANTED SERVICE VISITS

If you call a service technician and it turns out that you could have fixed the error yourself by, for example, following the instructions in this manual or by changing a fuse in the fuse box, the customer will be charged for the service visit.

COMMERCIAL PURCHASES

Commercial purchases are all purchases of devices that are not intended to be used in private households but instead intended to be used for commercial purposes (in restaurants, cafés, canteens, etc.) or intended to be hired out or otherwise used by multiple users in turn. There is no warranty offered for commercial purchases, as this product is only intended for regular household use.

SERVICE

The customer is always responsible for ensuring that the product can be reached by the technician when exercising the warranty to request a service visit. The warranty covers the product in the condition that the customer received it. The technician's work is subject to working environment regulations (such as regulations concerning heavy lifting) and this has an impact on what the technician is allowed to do during a service visit.

We accept no liability for printing errors.

ENVIRONMENT

The device complies with the provisions of EU Directive 2012/19/CE on the disposal of electronic equipment. Electrical and electronic equipment (EEE) contains materials, components and substances that can be dangerous and harmful to people's health and the environment if the electrical and electronic equipment (EEE) is not disposed of correctly.



Products marked with the crossed over trash bin are electrical and electronic equipment. The crossed over trash bin symbolises that electrical and electronic equipment must not be disposed of together with unsorted household waste - it needs to be disposed of separately.

Users must use the municipal/council waste disposal scheme to reduce the environmental impact of disposing electrical and electronic equipment and allow for more recycling and for the waste to be used in other useful ways.

For more details regarding how to treat and recycle this product, contact your local recycling centre.